


1




2nd or 3rd hole from edge

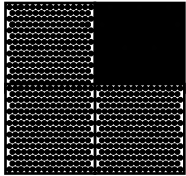

Extras, as needed

Overlap mats to minimize anchor requirements

Parallel

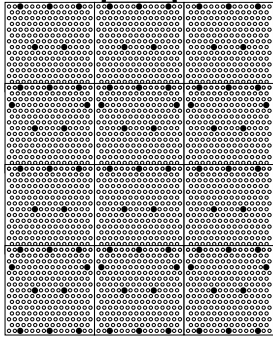

Position anchors to secure ScourStop mats flush with soil surface. Minimize gaps or bridging. Add extra anchors if necessary, or improve soil surface smoothness.

**Anchor requirements\*:**

**First Row of Mats\*\***

- minimum of 8 anchors/mat

**Second+ Row of Mats\*\***

- minimum of 5 anchors/mat

\* To achieve consistent contact with the soil, exceed the minimum anchor requirement at installation.

\*\*Perpendicular to flow.


2

Insert the machined end of the driver into the bullet anchor.

3

36" long

Clean the machined end each time to ensure easy release when removing driver.



4

5

6

7